



Joshua Tree Manual

How to Mount a Joshua Tree

Concrete Pad Requirements

Single-Arm: 23"x23"x4"D

Multi-Arm up to 8 ft: 30"x30"x8"D

Multi-Arm 9 ft+: 36"x36"x8"D

Creating Your Pad


Build a simple wood frame to outline your hole. Set/level frame inside hole so that at least one inch of frame is above ground level. This will prevent water from pooling around the base of your piece. Use a 2x4 suspended across the frame to smooth or level your concrete.

Mounting Your Piece | Option 1

After 20-30 minutes of curing, place piece on concrete pad. Use hammer to tap 1/2-inch, 4"L Redhead anchors through holes in base into moist concrete until flush. Wait 7-10 days before tightening nuts on the anchor.

Mounting Your Piece | Option 2

Let concrete cure up to 48 hours. Using a hammer drill create hole in concrete pad. Using 1/2-inch, 4" L Redhead anchors secure piece to the concrete pad.

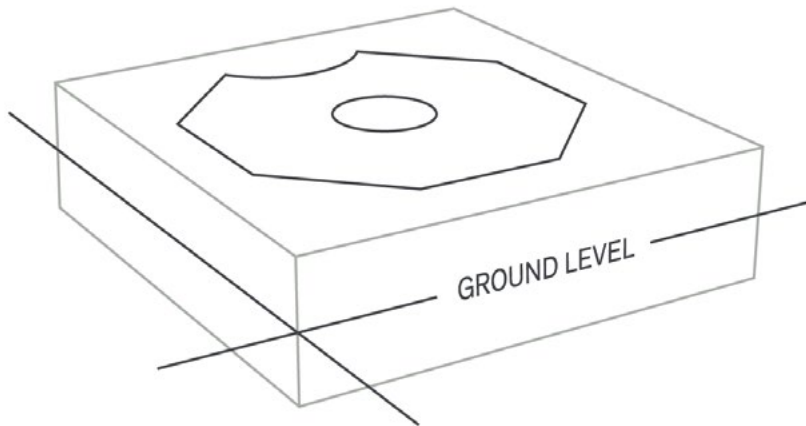

Note: Wood frame can be removed after concrete is dry



Fluffing the Joshua Tree Head(s)

- 1 Place Joshua Tree head into post.
- 2 Fold the top 5 layers of leaves up (every other leaf as you go around for best results) creating a sphere.
- 3 Fold the bottom 5 layers of leaves down (every other leaf as you go around) to complete the sphere.

