

# G460

## *Multi-gas Detector*

# Operations Manual



**GfG Instrumentation**

1194 Oak Valley Dr, Ste 20, Ann Arbor MI 48108 USA  
(800) 959-0329 • (734) 769-0573 • [www.goodforgas.com](http://www.goodforgas.com)

# **GfG Products for Increased Safety**

---

Congratulations on your purchase of a high technology product from GfG – you have made an excellent choice!

Our detectors are characterized by reliability, safety, peak performance and economic efficiency. They comply with national and international directives.

This manual will help you operate the detector quickly and safely.

Please take note of these instructions before putting the device into operation!

If you have any questions, please feel free to contact us.

GfG Instrumentation, Inc.  
1194 Oak Valley Drive, Ste 20  
Ann Arbor, MI 48108 USA

Phone: (800) 959-0329 or (734) 769-0573

Fax: (734) 769-1888

E-mail: [info@gfg-inc.com](mailto:info@gfg-inc.com)

Website: [www.goodforgas.com](http://www.goodforgas.com)

# Table of Contents

Introduction	1	Time	18
For Your Safety	1	Options	19
Application and Purpose	1	Latching Alarm Function	19
Special Conditions for Safe Use	2	Sensor – Enable	19
Design	3	AutoCal® – Air	20
Operation	4	AutoCal® – Gas	20
Detection Mode	4	Sensor Menu	20
Turning the Device Off	6	Zeroing – Adjust Zero Point	21
Display Illumination	6	Calibration	22
Individual Gas Display / Rotating the		Alarms – Adjust Alarm Thresholds	23
Display	6	Calibration Dates	23
Battery	7	Information	24
Alarms	7	CH4 Unit	24
Resetting Latching Alarms	8	Activate Lights	24
STEL, TWA, Maximum / Minimum		Replacing the Batteries and	
Values	9	the Rechargeable Battery Pack	
Peak – Adjusting Peak Values	9	Module	24
Service Mode	9	Service	25
Main Menu	10	Charging the Optional NiMH Battery	
Location – Entering a Location	10	Pack	26
User – Entering User Name	11	Cleaning	26
Datalogger	12	Anti-Lazy Battery	27
Datalogger(sample screen shots)	13	Maintenance and Inspection	28
Confidence Blip	14	Service – Repair	28
Options	15	Sensor Types and Detection Ranges	
Service Menu	15		30
System Menu	16	Sensor Specifications	31
Bump Test	17	Technical Data	34
Calibration	17	Caution	35
Inspection	18	Warranty	39

## Introduction

### For Your Safety

Like any piece of complex equipment, the GfG G460 will do the job it is designed to do only if it is used and serviced in accordance with the manufacturer's instructions.

**CAUTION:** For safety reasons, this equipment must be operated and serviced by qualified personnel only. Read and understand the instruction manual completely before operating or servicing this device.

**PRUDENCE:** Pour des raisons de sécurité, cet équipement doit être utilisé et entretenu par du personnel qualifié. Lire et comprendre le manuel d'utilisation avant de faire fonctionner ou de réparer cet appareil.

The warranties made by GfG with respect to the product are voided if the product is not used and serviced in accordance with the instructions in this manual. Please protect yourself and your employees by following them. The above does not alter statements regarding GfG's warranties and conditions of sale and delivery.

### Application and Purpose

The G460 is a handheld detector for personal protection from atmospheric hazards. The detector measures continuously in diffusion mode and gives visual and audible alarms if a gas-induced danger arises. The G460 meets the following approval:

Intrinsic safety: c-CSA-us <sub>us</sub>  
Class I, Division 1, Groups A, B, C, and D T3  
Ex ia IIC T3  
Class I, Zone 0 AEx ia IIC T3  
Ex db eb ia IIC T3/T4 Gb (NiMH=T3) -20 ≤ Ta ≤ +45 / +50 °C  
08.1934905X

Standards: IEC 60079-0:2011 (Ed.6)  
IEC 60079-7:2015 (Ed.5)  
IEC 60079-1:2014 (Ed.7)  
IEC 60079-11:2011 (Ed.6)  
CSA C22.2 No. 152-M1984  
UL 913  
ANSI / ISA-12.13.01-2000

EMI / RFI Resistance: EMC Directive 89 / 336 / EEC

## **Special Conditions for Safe Use**

**WARNING:** “READ AND UNDERSTAND INSTRUCTION MANUAL BEFORE OPERATING OR SERVICING.”

**WARNING:** “EXPLOSION HAZARD – USE ONLY BATTERY PACK 1450-202, 1450-211 OR 1450-212. DO NOT MIX OLD BATTERIES WITH NEW BATTERIES. REPLACE OR RECHARGE BATTERIES ONLY IN A NON-HAZARDOUS LOCATION.”

No precautions against electrostatic discharge are necessary for portable equipment that has an enclosure made of plastic, metal, or a combination of the two, except where a significant static-generating mechanism has been identified. Activities such as placing the item in a pocket or on a belt, operating a keypad, or cleaning with a damp cloth, do not present a significant electrostatic risk. However, where a static-generating mechanism is identified, such as repeated brushing against clothing, then suitable precautions shall be taken, for example, the use of anti-static footwear. Additionally, the equipment shall be carried at the body while in the hazardous location, and must not be laid down unattended.

Under certain extreme circumstances, the non-metallic cover may generate an ignition-capable level of electrostatic charge; therefore, the equipment shall not be used in a location where the external conditions are conducive to the build-up of electrostatic charge on such surfaces. In addition, the equipment shall only be cleaned with a damp cloth.

If a charge-generating mechanism is present, the exposed metallic part on the enclosure is capable of storing a level of electrostatic charge that could become incendive for IIC gases. Therefore, the user / installer shall implement precautions, for example, those listed above, to prevent the build-up of electrostatic charge. This is particularly important if the equipment is brought into a Zone 0 location.

The equipment shall only be charged when in the non-hazardous area using a charger specifically supplied for use with the unit (for example part number 4001-650, manufactured by GfG), approved as SELV or Class 2 equipment against IEC 60950, IEC 61010-1 or an equivalent IEC standard. The maximum voltage and current from the charger shall not exceed 12 V DC and 1.25 A respectively.

# Design



## Operation

GfG recommends frequent verification of accuracy. The safest course of action is to verify accuracy with a known concentration of gas prior to each day's use. If the readings are less than 90% or greater than 120% (-10% to +20% accuracy) the detector must be calibrated before use.

**In compliance with c-CSA (Canada) the following requirements must be observed:**

**CAUTION:** Before each use, sensitivity must be tested on a known concentration of CO, H<sub>2</sub>S and combustible gas (depending on which sensors are installed) equivalent to 25 to 50% of the full scale concentration. Accuracy must be within -0 to +20% of the actual measurement.

Accuracy may be corrected by performing an AutoCal<sup>®</sup> adjustment (see calibration).

## Detection Mode


Turning the Device On

Turn the G460 on in an environment known to be free from gases and / or vapors.



Press the right key to turn the G460 on.

After turning the G460 on, the display gives a short message about the detector, the user, the location (this message can be set in service mode). Should the date for the next inspection pass, the G460 gives an audible signal and the display reads "Inspection Overdue." The display also shows every gas being measured, its detection range and the set alarm thresholds.

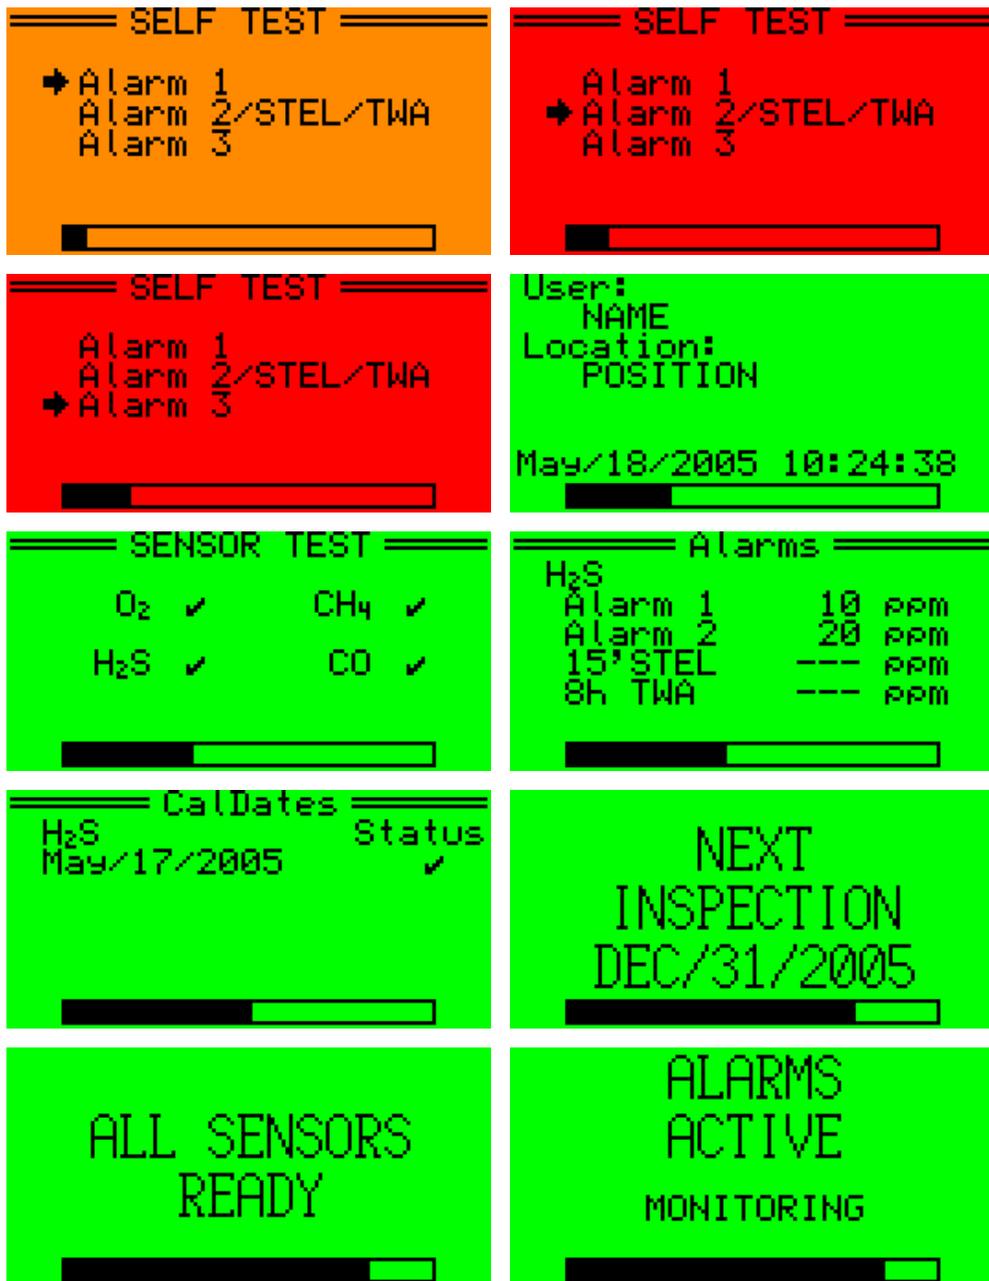

**NOTE:** GfG recommends that you “bump check” the sensors before each use to confirm their ability to respond to gas. To do this, expose the detector to a gas concentration that exceeds the alarm set points. Manually verify that the audible and visual alarms are activated. Calibrate if the readings are not within the specified limits.

**NOTE:** GfG vous recommande de “test cogner” les capteurs avant chaque utilisation afin de confirmer leur capacité à répondre à gaz. Pour ce faire, exposer le détecteur à une concentration de gaz qui dépasse les points de consigne d’alarme. Vérifier manuellement que les alarmes sonores et visuelles sont activées. Calibrer si les lectures ne sont pas dans les limites spécifiées.

## Turning the Device Off

To turn the G460 off, hold the right key (**ZOOM**) for approximately 5 seconds.

## Display Illumination

Whenever you press a key or any alarm condition is activated, the display illumination turns on. It turns off automatically after approximately 10 seconds, or when the alarm condition is corrected.

## Individual Gas Display / Rotating the Display

The display can be rotated 180° by pressing the right and the left keys simultaneously.

The G460 allows the user to store and display time-weighted averages (TWA), short-term exposure levels (STEL), peak values (MAX) and minimum values (MIN). The stored values have the following meanings:

- STEL: The STEL (short-term exposure level) is the average value of the gas concentration over a period of time, which is determined by the short-term period. Short-term exposure levels are used to evaluate exposure peaks. The short-term period is typically set to 15 minutes.
- TWA: The time-weighted average (TWA) is the average value of the gas concentration over an 8 hour working shift. For calculating the total dose, the G460 uses all gas levels measured since the detector was turned on.
- MIN / MAX: Minimum and peak values measured since the detector was switched on or since the stored values were reset.

Press **ZOOM** briefly to view one gas at a time (**ZOOM** mode). Pressing **ZOOM** momentarily while in **ZOOM** mode will cycle to the next detected gas.

To read the stored values, press and hold the right key while in zoom mode. Press the key repeatedly to display all other measurement values and the battery capacity one after the other.



Example – Zoom Display for H<sub>2</sub>S:

- Top left: Maximum value
- Top right: Actual gas concentration
- Bottom left: Short-term exposure level (STEL)
- Bottom right: Time-weighted average (TWA)

## Battery

A fully charged G460 battery pack has a capacity of up to 25 hours of continuous operation in diffusion mode. The operational time may be reduced by sampling intervals or alarms. The remaining battery capacity is indicated by the battery symbol on the left side of the display. The black area represents the remaining capacity.

When the capacity falls to 4% power save mode is displayed and the G460 gives both a visual (red alarm LED and an “discharged” battery symbol in the display) and an audible warning.

## Alarms

If the measured gas concentration exceeds a pre-set threshold, the detector immediately gives audible, visual and vibrating alarms. The display also indicates the exceeded alarm threshold which caused the alarm. A loud acoustic alarm (103 dB at 30 cm), bright flashing LEDs and a vibrating alarm warn of dangerous gas concentrations. In case of a gas alarm the whole display turns orange or red, depending on the gas concentration and the exceeded alarm threshold.

The G460 provides three instantaneous alarms for oxygen (O<sub>2</sub>) and combustible gases (CH<sub>4</sub>), and two alarms for toxic gases (CO, H<sub>2</sub>S). The G460 warns the user of dangerous conditions caused by oxygen deficiency or enrichment and levels of combustible and toxic gases which exceeds the alarm threshold.

For toxic gases there is an additional alarm for exceeded time-weighted averages and short-term exposure levels (TWA and STEL).

Alarm Type	Sensors	Number of Alarms	Description
Instantaneous Value (AL)	Oxygen Combustible gases Toxic gases	3 3 2	An instantaneous alarm is activated immediately if the gas concentration exceeds or falls below a pre-set threshold. The alarm values are adjustable.
Short Term Value (STEL)	Toxic gases	1	The short-term exposure limit (STEL) is the average concentration over a short period of time (e.g. 15 minutes). The STEL alarm is not latching; it resets automatically as soon as the concentration falls below the threshold.
Long Term Value (TWA)	Toxic gases	1	The time weighted average (TWA) refers to an 8-hour shift and calculates the average concentration. The TWA alarm cannot be reset. It is only deactivated if the detector is switched off.
Over Range	All	1	The screen will display 
Under Range	All	1	The screen will display 

## Resetting Latching Alarms

When alarm 2 and 3 are set to latching you must reset an activated alarm by pressing the **RESET** key. Alarm 1 will automatically reset when the gas danger has passed.

If the detection range of the LEL sensor is exceeded, the display will read “”, indicating it is over range, instead of a value for gas concentrations above 110% LEL. To protect the sensor from damage, the device turns off the sensor. However, the audible and visual alarms and the “” message remain active. The alarms must be reset by pushing the **RESET** key. The display will read: “Fresh air?” **If you have made sure that there is no combustible gas in the vicinity of the CH<sub>4</sub> sensor**, press yes to resume detection.

## STEL, TWA, Maximum / Minimum Values

When you turn the G460 on, the unit begins to measure continuously in diffusion mode. All concentrations are shown on the display. In addition, short term and long-term averages (STEL and TWA) are calculated for toxic gases; for non-toxic gases peak and minimum values (MAX and MIN) are stored. The stored values can be read from the display by accessing the applicable display mode.

**WARNING:** To avoid possible personal injury, do not turn off the detector during a work shift. TWA, STEL and MAX readings are reset when the G460 is turned off.

## Peak – Adjusting Peak Values



During peak mode (activated by pressing the left key **PEAK**), peak values can be monitored and displayed. The display shows an animated symbol in the bottom left corner.

Within *zoom display* the peak value will be displayed instead of the gas concentration.

Pressing **RESET** during peak mode will reset the peak memory to the current gas concentration. Pressing **RESET** during zoom display will reset the peak memory and the peak value memory to the current gas concentration.

By pressing **PEAK** again peak mode is deactivated.

## Service Mode

Hold the middle key (RESET) for approximately 5 seconds to activate service mode. In the service mode the program parameters of the G460 can be adjusted and changed. A menu highlights the different adjustment possibilities. Several menu points require an access code (1100) to prevent accidental modification of important functions. In service mode all alarms are deactivated.

All adjustments in service mode are menu-controlled. The 3 keys stand for


the function which is shown in the bottom line of the display. The main menu is displayed first when you enter service mode.

## Main Menu

The menu points are:

1. **Location** (the physical location of the G460)
2. **User** (user identity)
3. **Datalogger** (adjust datalogger function)
4. **Confidence blip** (adjust intervals)
5. **Service** (start service menu)
6. **AutoCal**<sup>®</sup>
7. **Options** (adjust alarm volume and display contrast)

The keys' functions are explained in the bottom line of the display. In the main menu the keys have the following functions:

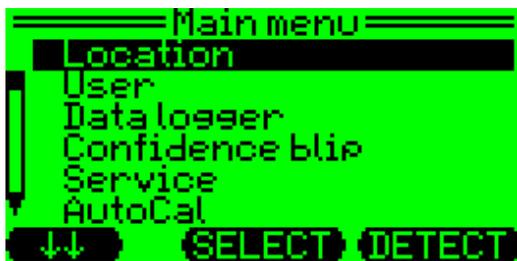

- Left key (←) scroll down
- Middle key (**SELECT**) select menu point
- Right key (**DETECT**) back to detection mode

## Location – Entering a Location

From a deposited table one location out of a hundred possible locations can be selected. The first two digits stand for the number of the table entry. With the exception of “00” all other 99 entries can only be edited with a PC. Within “00” up to 15 letters / figures can be entered, which will be stored as **operational place** in the G460. Entry is automatically completed when the cursor reaches the end mark (>).

When **Location** is selected by the middle key (**SELECT**), the following is displayed, and the keys have the following functions:



First a location number is specified:

- EDIT** - Change location name
- EXIT** - Back to main menu
- ↑↑ - Change location number

After selecting a location number (by pressing the right key – **↑↑**) the location entry will be displayed. To change the location, press the left key (**EDIT**).

The following is displayed, and the keys have the following functions:



- ABC↓↓** - Select symbol – move down
- <<>>** - Enter the blinking letter for figure and move the cursor to the right
- 012↑↑** - Select symbol - move up

### User – Entering User Name

From a deposited table one entry out of ten possible entries can be selected. The first two digits stand for the number of the table entry. Except for “00,” the other 9 entries can only be edited with a PC. Within “00” up to 15 characters can be entered, which will be stored as “**IDENTIFICATION**” in the G460. Entry is automatically completed when the cursor reaches the end mark (>). The entry process for user name (ID) is the same as that of the location entry.



- EDIT** - Change location name
- EXIT** - Return to main menu
- ↑↑** - Change identification number

## Datalogger

Within the “datalogger” menu point different settings can be accessed:



**Full** shows the used percentage of the datalogger memory

**↓** - Jump to the next parameter

**ERASE** - Deletes data. A security prompt will appear (delete data?) → confirm with yes (right key), deny with no (left key)

**EXIT** - Back to main menu



If **Mode** is selected, the instantaneous value (Instant), average value (Average) or peak value (Peak) can be chosen with the left or right key.



If **Interval** is selected, the data recording interval can be set between 1 second and 60 minutes by pressing **↓** and **↑**

# Datalogger (sample screen shots)

GfG Data Download Software

File Device Edit View Options Window Help

GfG42.tmp

Datalogger G450  
Serialno.: 05090039  
User:

Date	Time	CO ppm	CH4 %LEL	O2 Vol%	H2S ppm	Event	Signal
6/15/2000	12:30:49 PM	2	0.0	17.3	0		Off
6/15/2000	12:30:52 PM	2	0.0	17.4	0		Off
6/15/2000	12:30:55 PM	2	0.0	17.5	0		Off
6/15/2000	12:30:58 PM	0	0.0	17.6	0		Off
6/15/2000	12:31:01 PM	0	0.0	18.1	0		Off
6/15/2000	12:31:04 PM	0	0.0	18.8	0		Off
6/15/2000	12:31:07 PM	0	0.0	19.3	0		Off
6/15/2000	12:31:10 PM	0	0.0	19.4	0		Off
6/15/2000	12:31:13 PM	0	0.0	19.5	0		Off
6/15/2000	12:31:16 PM	0	0.0	19.6	0		Off
6/15/2000	12:31:19 PM	0	0.0	19.6	0		Off
6/15/2000	12:31:22 PM	0	0.0	19.7	0		Off
6/15/2000	12:31:25 PM	0	0.0	19.8	0		Off
6/15/2000	12:31:28 PM	0	0.0	18.9	0		Off
6/15/2000	12:30:14 PM			18.9	0		Off
6/15/2000	12:30:14 PM	0	0.0	19.0	0		Off
6/15/2000	12:30:17 PM	0	0.0				Off
6/15/2000	12:30:17 PM	0	0.0	2.2	10		Off
6/15/2000	12:30:20 PM	0	0.0	2.0	10		Off
6/15/2000	12:30:23 PM	0	0.0	2.3	10		Off
6/15/2000	12:30:26 PM	0	0.0	2.8	9		Off
6/15/2000	12:30:29 PM	0	0.0	3.3	9		Off
6/15/2000	12:30:32 PM	0	0.0	3.4	9		Off
6/15/2000	12:30:35 PM	0	0.0	3.3	8		Off

G450/...


Line: 18 from 106

G450/05090039

General Datalogger User Time Date Online Data Sensor

Time	Value	Gas	Alarm	State
12:30:27	0 ppm H2S			
	4 ppm CO			
	<b>16.6 Vol% O2</b>		<b>AL1 AL2</b>	
	0 %LEL CH4			
	2.806 V U-BAT			

GfG

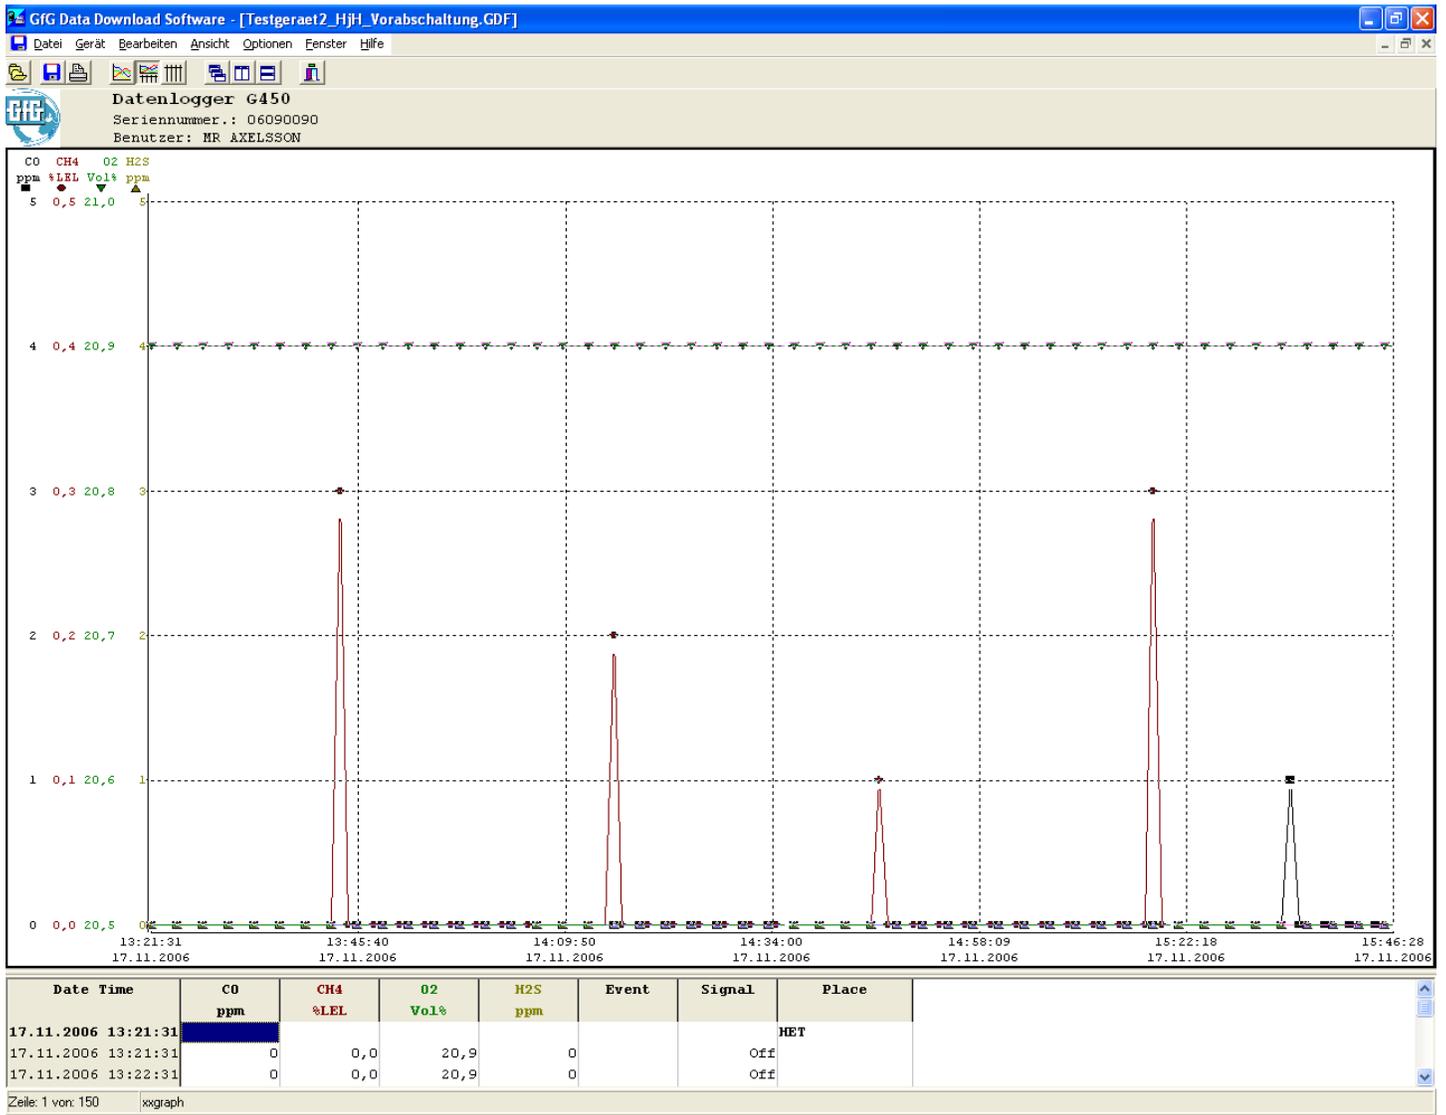

## Confidence Blip

Within the Confidence blip menu point, the interval between confidence blips can be chosen.



The confidence blip can be heard in intervals of 15 to 90 seconds or be deactivated (- -).

- ↓ - Scroll down
- SELECT** - Confirm interval
- EXIT** - Return to main menu

## AutoCal®

The AutoCal® menu point can be selected in the main menu or occurs automatically when the calibration adapter (Smart Cap) is connected.

Within the AutoCal® menu point the device can be calibrated with fresh air (ZERO) or test gas (CAL).




- |             |                           |
|-------------|---------------------------|
| <b>AIR</b>  | - AutoCal® with fresh air |
| <b>GAS</b>  | - AutoCal® with test gas  |
| <b>EXIT</b> | - Back to main menu       |

## Options

Within Options you can adjust

- Anti-Lazy battery syndrome. See page 25 for Deep discharge cycle instructions.
- The buzzer volume (90 dB or 103 dB)
- The screen contrast: 1 (very low) up to 15 (very high)

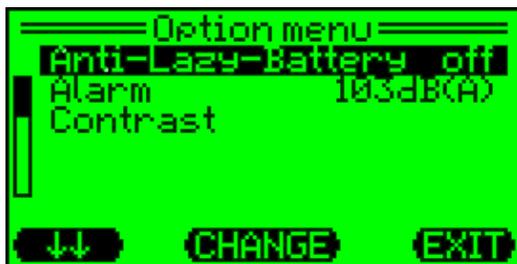

- |               |                             |
|---------------|-----------------------------|
| ↓             | - Scroll down               |
| <b>CHANGE</b> | - Change selected parameter |
| <b>EXIT</b>   | - Back to main menu         |

**NOTE:** Rechargeable batteries inherently have a tendency to loose capacity over time. Some of this loss manifest itself as “voltage depresion” (aka Lazy Battery). With GfG’s advanced battery management technology, some of the lost capacity can be restored using the “Anti-Lazy Battery” feature. The overall battery life can be extended if this feature is used at least once every three months.

## Service Menu

Enter the service menu by selecting **Service**. Within the service menu the G460 program parameters can be adjusted.

This menu point is only accessible with the code “1100.” The code prevents important functions from being changed by mistake or by unauthorized persons. In service mode all alarms are suppressed.



**ABC↓↓**

- Previous digit

**<<>>**

- Enter (cursor moves automatically to the next position). By holding the key the last entry will be deleted and the cursor will move one position back.

**012↑↑**

- Next digit

After entering code “0011,” you enter the service menu (see System Menu) and can perform general adjustments (zeropoint, span, alarms, calibration, etc).




Select Sensors to adjust sensor-specific functions (alarms, calibration, etc).

**DETECT** - Back to detection mode

## System Menu

Within the System menu the following adjustments are possible:

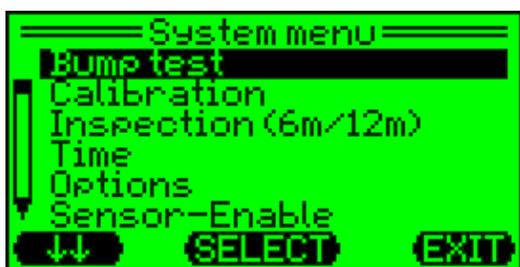

Bump Test

- Date of next bump test

Calibration

- Date of next calibration

Inspection

- Date of next inspection

Time

- Date and time

Options

- Change language, vibrating alarm, latch and auto save settings

Sensor-Enable

- Turn sensors on or off

AutoCal® - Air


- Enable AutoCal® to zero specific sensors

AutoCal® - Gas

- Enable AutoCal® to adjust the sensitivity of specific sensors

Information

- Software version, instrument serial number, battery type, etc.

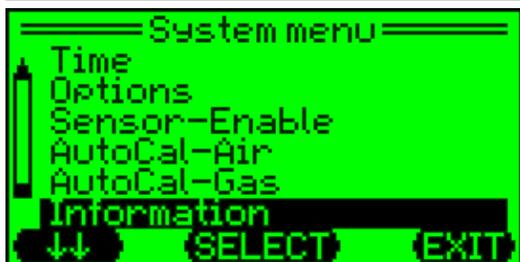

## Bump Test

The date of the next bump test can be entered under the **Bump Test** menu. When the date arrives, the G460 will automatically sound an alarm. If the bump test date passes, the G460 will give a reminder every time it is switched on.




To change the interval:

- ↓↓ - Decreases value
- EXIT - Confirms value
- ↑↑ - Increases value

## Calibration

The date of the calibration can be entered under the **Calibration** menu. When the date arrives, the G460 will automatically sound an alarm. If the calibration date passes, the G460 will give a reminder every time it is switched on.

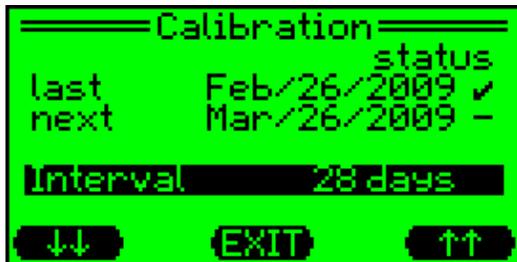

To change the interval:

- ↓↓ - Decreases value
- EXIT - Confirms value
- ↑↑ - Increases value

## Inspection

The date of the next maintenance or inspection can be entered under the **Inspection** menu. When the date arrives, the G460 will automatically sound an alarm. If the inspection date passes, the G460 will give a reminder every time it is switched on.



- >> - Moves to the next parameter
- SELECT - Selects the blinking parameter
- EXIT - Back to system menu



- To change a parameter:
- ↓ ↓ - Decreases value
  - EXIT - Confirms value
  - ↑ ↑ - Increases value

## Time

The time and date can be adjusted under the **Time** Menu.




- >> - Moves to the next parameter
- SELECT - Selects the blinking parameter
- EXIT - Back to system menu



- To change a parameter:
- ↓ ↓ - Decreases value
  - EXIT - Confirms value
  - ↑ ↑ - Increases value

## Options

In the **Options** menu point, the language can be changed, the vibrating alarm can be activated or deactivated and the latching and auto save features can be turned on or off.

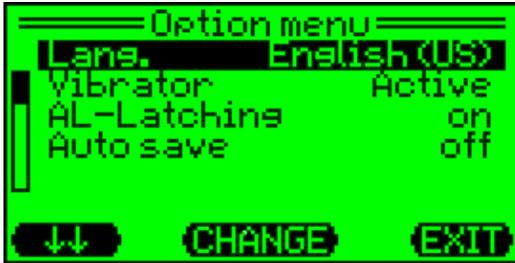

- >>** - Moves to the next parameter
- SELECT** - Selects the blinking parameter
- EXIT** - Back to system menu

## Latching Alarm Function

The detector is shipped with the latching alarm function disabled. If the alarms are set to latch, the audible and visual alarms will persist until the alarm is acknowledged by pressing the center key (**RESET**). To enable latching alarms, press the left key (**Left Arrow**) until **Latching** is highlighted. Press the center key (**CHANGE**) to enable latching alarms.

## Sensor – Enable

Each individual sensor can be activated or deactivated for each measurement. This function is necessary for applications in which a gas does not need to be measured or if the G460 will be upgraded with different sensors.



ON or OFF indicates the status of the sensor (active or inactive).

- Down Arrow** - Scroll down
- On/Off** - Turns sensor on or off
- Exit** - Return to system Menu

## AutoCal® – Air

This menu point is to enable AutoCal® for sensors, using fresh air (zero calibration). Generally all sensors will be zero calibrated and show "ON."




On/Off

Exit

- Scroll down to next sensor
- Calibration/non-calibration of sensor in AutoCal® program
- Return to service Menu

## AutoCal® – Gas

This menu point is to enable AutoCal® for sensors, using a test gas (gas calibration). Generally all sensors (except O<sub>2</sub>) will be calibrated and show "ON."

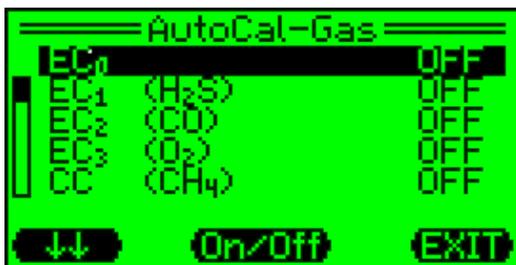

On/Off

Exit

- Scroll down to next sensor
- Calibration/non-calibration of sensor in AutoCal® program
- Return to service Menu

## Sensor Menu

The following functions refer to individual sensors in the G460. In the sensor menu each individual sensor can be selected. The adjustments are only valid for the selected sensor.

For a description of sensor-specific adjustments, the O<sub>2</sub> sensor is being used as an example. The adjustment options are the same for all sensors.



SELECT

Exit

- Move to next sensor
- Select sensor
- Return to service Menu




For each sensor, the following adjustments can be made:

- Zero - Adjust the zero point
- Calibrate - Sensitivity calibration with test gas
- Alarms - Adjust alarm thresholds
- Calibration dates - View the date and status of the last calibration and zero
- Information - View sensor information

- ⇓ - Move to next menu point
- SELECT - Select menu point
- EXIT - Return to service menu

## Zeroing – Adjust Zero Point

To adjust the zero point, the sensor menu point Zero must be selected.

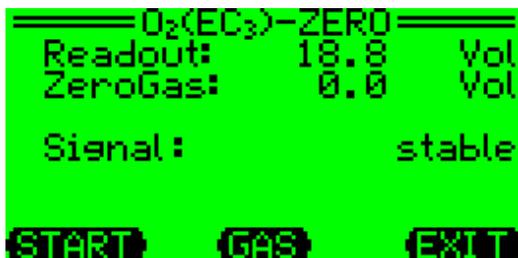

- START - Start zero point adjustment
- GAS - Enter zero gas concentration
- EXIT - Back to “O2 menu”



After entering GAS the display reads:

- ⇓ - Zero gas value decreases by one unit
- EXIT - Enter Value
- ⇑ - Zero gas value increased by one unit

**NOTE:** To set the zero point for oxygen, supply the unit with 100% nitrogen through a calibration adapter.

## Calibration

During calibration, the sensitivity of the G460 is adjusted. Before starting calibration, make sure that the zero point adjustment has been done.

**NOTE:** Calibrate the detector before first-time use and then on a regular schedule, depending on use and sensor exposure to poisons and contaminants.

**NOTE:** étalonner le détecteur avant la première utilisation, puis à intervalles réguliers, en fonction de l'utilisation et de l'exposition du capteur aux poisons et des contaminants.

For calibration you need a suitable test gas, e.g.:

Detection Range	Test Gas
TOX	Carbon monoxide (CO), hydrogen sulfide (H <sub>2</sub> S)
OX	Fresh air or test gas with 20.9% volume oxygen (O <sub>2</sub> ) in nitrogen (N <sub>2</sub> )
EX	Methane (CH <sub>4</sub> )

**NOTE:** Please call GfG for the correct calibration gas for your instrument.

To adjust sensitivity, the sensor menu point Calibrate has to be selected.



- START** - Start calibration
- GAS** - Enter calibration gas concentration
- EXIT** - Return to O<sub>2</sub> Menu



- After entering GAS the display reads:
- ↓** - Decreases calibration gas value by one unit
  - EXIT** - Saves value
  - ↑** - Increases calibration gas value by one unit

**WARNING:** If the combustible sensor may be exposed to a known poison (silicon, sulfur, halogenated compounds, etc), GfG recommends checking it against a known concentration of calibration gas before use.

## Alarms – Adjust Alarm Thresholds

The G460 provides 3 alarm thresholds for each non-toxic gas (O<sub>2</sub>, CH<sub>4</sub>). For each toxic gas (H<sub>2</sub>S, CO) the G460 provides 2 alarm thresholds. The alarms are triggered when the gas concentration exceeds or falls below the threshold. For toxic gases an additional alarm for exceeded long-term and short-term averages can be set.



After selecting the sensor menu point Alarms the following reading is displayed (here, for an O<sub>2</sub> sensor):

- ↓ - Scroll down
- EDIT - Change alarm threshold
- EXIT - Back to O<sub>2</sub> menu


After selecting the alarm thresholds by pressing EDIT (e.g.: Alarm 1), the value can be entered:



- ↓ - Decreases alarm value by one unit
- EXIT - Back to Alarm menu
- ↑ - Increases alarm value by one unit

**WARNING:** If alarm points are set to off (--), the user will not be notified of an alarm condition. This could result in injury or death.


## Calibration Dates

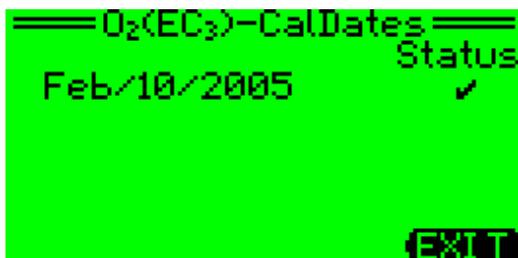

Within the sensor menu point Calibration dates, the date of the last calibration can be displayed, as well as if the calibration was successful (✓) or not (✗).

## Information

In this menu point, specific information for the sensor can be displayed:

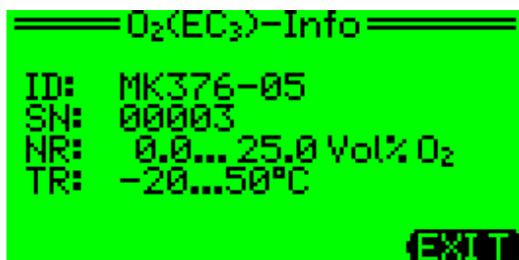

Type of sensor (ID)	-	Type of sensor
Serial number (SN)	-	Serial number
Detection range (NR)	-	Detection range
Temperature range (TR)	-	Temperature range

## CH4 Unit

A unit equipped with a CH<sub>4</sub> sensor has an additional Unit and gas menu point in which you can set the CH<sub>4</sub> sensor to detect in % LEL or % volume along with a variety of combustible gases.

## Activate Lights

The G460 provides an optional battery pack with lights. The lights can be switched on or off by holding down the left key for approximately 5 seconds. The lights are useful when the device is tied to a cord and lowered down into a sewer system. Using the lights can prevent the device from being dunked under water.

## Replacing the Batteries and the Rechargeable Battery Pack Module

**NOTE: Batteries must not be replaced in hazardous locations.**

**Replace only in non-hazardous locations.**

**NOTE: Piles ne doivent pas être remplacés dans des endroits dangereux. Remplacez uniquement dans des endroits non dangereux.**

Turn the detector off before you replace the batteries. To replace the batteries or the supply module, unscrew the two screws on the front of the detector and pull the whole module backwards or insert the allen wrench through one of the screw holes to push the module backwards.

When the alkaline batteries have to be replaced, use a thin object to push the two battery cells out through the PCB holes. When inserting new batteries, check for the correct polarity (see plastic holder). Secure the supply module by replacing the two screws.

**NOTE: Failure to use Duracell AA MN1500 LR6 batteries will void the warranty.**

**NOTE: Utilisez uniquement des piles AA, Duracell MN 1500 LR6.**

### Removing the battery pack

1. Use the hex wrench tool to loosen and remove the two screws securing the battery pack to front of the instrument housing.
2. GENTLY remove the battery pack from the instrument.
3. USE YOUR FINGERS TO REMOVE THE BATTERY PACK FROM THE INSTRUMENT.
4. DO NOT USE A SCREWDRIVER OR OTHER HARD TOOLS TO REMOVE THE BATTERY PACK.

### Dismantling

1. Make sure the instrument is turned off.
2. Remove the battery pack.
3. Using a star tool, loosen the four screws holding the front and back of the instrument housing together.
4. GENTLY remove the back cover.
5. DO NOT USE A SCREWDRIVER OR OTHER HARD TOOLS TO PRY APART THE CASE SECTIONS!

### Assembling

1. Reattach the back of the instrument housing.
2. SQUEEZE THE CASE SECTIONS FIRMLY TOGETHER BEFORE TIGHTENING THE FOUR SCREWS.
3. Tighten the four screws in diagonal sequence (just like tightening the lug nuts on a tire).
4. TIGHTEN THE FOUR SCREWS SECURELY BUT DO NOT OVERTIGHTEN!

## Charging the Optional NiMH Battery Pack

**WARNING:** The detector must not be charged in a hazardous location. Only charge in non-hazardous atmospheres of 4 to 122°F (-20 to 50°C). Charge the detector using only the recommended charging adapter. Do not use any other charging adapter, as a fire or an explosion may result. Do not connect the charging adapter to voltages other than those used in North America, or an explosion may result.



The rechargeable G460 battery pack module can be charged with the GfG Drop-in Charger. The Drop-in Charger is also available as a vehicle charging unit. Make sure the maximum connected voltage does not exceed 30 V. To charge the G460, simply slide the device into the charging unit. The G460 will beep and then display either “quick charge” or “trickle-charge.” These two modes indicate the charge status of the G460. When the rechargeable battery pack is completely depleted, it will take approximately 6 hours to recharge in quick-charge mode. Then the Drop-in Charger will automatically switch to trickle-charge mode so that it is impossible to overcharge the battery pack. Both charging modes are indicated on the G460’s display. When the charger changes to trickle-charge mode, the battery pack has reached at least 80% of its capacity. An additional 2-3 hours of trickle-charge will fully charge the detector. The G460 will keep charging as long as it is plugged into the charger. Charging can be stopped by removing the G460 from the Drop-in Charger or by unplugging the charger.

## Cleaning

The casing can be cleaned with a damp cloth. Never use solvents or detergents!

## Anti-lazy Battery Deep Discharge Cycle

NiMH batteries can develop voltage depression. Even though the normal amount of power is stored in the battery, the peak voltage in “lazy” batteries drops more quickly than usual. To the user it appears the battery is not holding its full charge.

Fully charged instruments that fail to operate for the expected time should be exercised by means of the “anti-lazy battery” deep discharge cycle.

G450 instruments with version 3.41 and higher firmware have the enhanced “anti-lazy battery” feature. GfG recommends updating your instrument firmware and updating to the latest version charger cradle and power adapter to take full advantage of the latest “anti-lazy battery” options. The latest version has a blue case and the serial number ends with a “D”. Contact an authorized GfG service center or distributor for assistance.

The “anti-lazy battery” procedure is initiated by following these steps:

1. Press and hold the “Reset” button until “Main menu” choices appear
2. Select “Options”, you will need to arrow down the list to select it
3. From the “Options menu” choose “Anti-Lazy-Batt.”
4. Press “Change” to turn on the one-time deep discharge feature
5. Display will show “1X” instead of “Off” to the right
6. Press “Exit” then “Detect” to return the instrument to normal operation

**NOTE: Do not turn the instrument off!**

7. Allow it to run until the battery is completely drained, then recharge as normal

If you have the latest version of firmware on the instrument and the latest version charger cradle and power adapter, when the battery icon shows it is down to the last 10% remaining voltage the instrument can be placed in the charger and the instrument will complete the anti-lazy battery deep discharge, then charge normally.

**NOTE: The instrument needs to be programmed for automatic activation.**

To set the instrument for automatic activation, follow steps 1 through 4 above, then follow these steps:

5. Choose “Days”
6. Select “Anti-Lazy days”, you will need to arrow down the list to select it
7. Press “Change”
8. Select the desired days for the automatic activation of this feature
9. Select “Exit” twice then “Detect” to return the instrument to normal operation

## Maintenance and Inspection

Maintenance includes service, calibration and adjustment, as well as repair if it is necessary. Gas monitoring devices can react differently depending on environmental conditions. It is important, independent from maintenance duties, to test the device before putting it into operation each day. Bump testing before each use is highly recommended.

## Service – Repair

**WARNING:** To avoid personal injury or damage to the detector, use only the specified replacement parts.

**CAUTION:** When using the optional motorized pump, block the pump inlet to test low flow alarm prior to each use. The low flow alarm must activate when air flow is compromised.

A function test must be executed before the first operation and at least once a year. This test comprises (depending on use and sensor exposure to poisons and contamination):

- Check zero point
- Charge battery (optional)
- When using optional pump, consult the G400 MP-2 pump operations manual for warnings and proper instructions.
- Test sensors with standard test gas (bump test) and adjust, if necessary
- Check alarm signals
- Test response time

**NOTE:** GfG recommends that you “bump check” the sensors before each use to confirm their ability to respond to gas. To do this, expose the detector to a gas concentration that exceeds the alarm set points. Manually verify that the audible and visual alarms are activated. Calibrate if the readings are not within the specified limits.

**NOTE:** GfG vous recommande de “test cogner” les capteurs avant chaque utilisation afin de confirmer leur capacité à répondre à gaz. Pour ce faire, exposer le détecteur à une concentration de gaz qui dépasse les points de consigne d’alarme. Vérifier manuellement que les alarmes sonores et visuelles sont activées. Calibrer si les lectures ne sont pas dans les limites spécifiées.

Any G460 repair must be done according to the manufacturer’s instructions and with genuine spare parts. Return to GfG for proper service.

## Accessories and Replacement Parts

	<b>Part Number</b>
Aspirator, hand (with wand)	7711-450
Batteries, alkaline (AA)	4002-001
Battery hardware kit (includes 6 screws and hex key)	4003-450
Battery pack, alkaline (without batteries) with vibrator	1450-202
Battery pack, rechargeable NiMH with vibrator	1450-211
Battery pack, rechargeable NiMH with vibrator and lights	1450-212
Cable, data downloading / USB interface (for PC)	1650231
Calibration adapter with tubing	7771-450
Calibration connector	1450225
Charger, plug-in (110 VAC) wall pack (for use with drop-in charger)	4001-650
Charger, vehicle	4001-650V
Crocodile clip (includes screw)	943450
Datalogging kit – alkaline (cable, software and drop-in cradle charger)	1450235
Datalogging kit – rechargeable (cable and software)	1450235R
Drop-in cradle charger (charge and data transfer)	1450220
Regulator, (for aluminum calibration gas cylinders) 0.5 lpm fixed flow rate w/pressure gauge and on / off knob	2603-025
Regulator, (for steel calibration gas cylinders) 0.5 lpm fixed flow rate w/pressure gauge and on / off knob	2603-020
Sensor - carbon monoxide, (CO)	0 - 300 ppm 1460232
Sensor - hydrogen sulfide, (H <sub>2</sub> S)	0 - 100 ppm 1460236
Sensor - methane, (CH <sub>4</sub> ) (combustible gases)	0 - 100 %LEL 1460710
Sensor - oxygen, (O <sub>2</sub> )	0 - 25% vol 1460231D
Sensor - COSH	CO 0 - 500 ppm H <sub>2</sub> S 0 - 100 ppm 1650730
Sensor - PID	0 - 2,000 ppm 1460704
Software, datalogging (CD only)	1450233

Spare parts and accessories should be stored at ambient temperatures of 32 to 86°F (0 to 30°C). Storage time should not be longer than 5 years. Electrochemical sensors should not be stored for more than 6 months. When you store oxygen sensors, be aware that storage reduces the expected lifetime of the sensor. When storing spare sensors, make sure that the ambient atmosphere is free from corrosive substances and sensor poisons.

## Sensor Types and Detection Ranges

**WARNING:** To avoid personal injury, use only sensors specifically designed for this detector.

Plug	Sensor Part Number	Detection Range	Gas	Resolution	T-Band*
<b>EC1</b>	1650730	0-500 ppm	Carbon monoxide (CO)	1 ppm	±3 ppm
		0-100 ppm	Hydrogen sulfide (H <sub>2</sub> S)	0.5 ppm	±0.2 ppm
<b>EC1</b> <b>EC2</b> <b>EC3</b>	1460232	0-300 ppm	Carbon monoxide (CO)	1 ppm	±3 ppm
	1460235	0-1000 ppm	Carbon monoxide (CO)	1 ppm	±5 ppm
	1460018	0-2000 ppm	Carbon monoxide (CO)	1 ppm	±4 ppm
	1460231D	0-25% volume	Oxygen (O <sub>2</sub> )	0.1% volume	±0.3% volume
	1460258	0-2000 ppm	Hydrogen (H <sub>2</sub> )	2 ppm	±50 ppm
	1460260	0-1.00% volume	Hydrogen (H <sub>2</sub> )	0.01% volume	±0.02% volume
	1460259	0-4.00% volume	Hydrogen (H <sub>2</sub> )	0.01% volume	±0.05% volume
	1460236	0-100 ppm	Hydrogen Sulfide (H <sub>2</sub> S)	0.1 ppm	±0.2 ppm
<b>EC2</b> <b>EC3</b>	1460238	0-50 ppm	Nitrogen Dioxide (NO <sub>2</sub> )	0.2 ppm	±0.6 ppm
<b>PID/</b> <b>EC2</b>	1460703	0-500 ppm	Isobutylene (C <sub>4</sub> H <sub>8</sub> )	0.1 ppm	±0.2 ppm
	1460704	0-2000 ppm	Isobutylene (C <sub>4</sub> H <sub>8</sub> )	0.5 ppm	±1.0 ppm
<b>PL</b>	1460710	0-100% LEL	Methane (CH <sub>4</sub> )	0.5% LEL	±2.5% LEL
		0-100% LEL	Propane (C <sub>3</sub> H <sub>8</sub> )	0.5% LEL	±2.5% LEL
<b>IR</b>	1460780	0-5% volume	Carbon Dioxide (CO <sub>2</sub> )	0.01% volume	-

\* T-Band = Tolerance band

## Sensor Specifications

MK211-7 Catalytic combustion sensor for combustible gases and vapors (GfG part number 1460710)

Response time:	$t_{90}$ : <30 seconds
Pressure	950 to 1,100 hPa: Maximum $\pm 5\%$ of detection range or $\pm 15\%$ of display (1,013 hPa)
Humidity	5% to 90% r.h.: Maximum $\pm 5\%$ of detection range or $\pm 15\%$ of display (55% r.h.)
Temperature	-4 to 122°F (-20 to +50°C): Maximum $\pm 3\%$ of detection range or $\pm 10\%$ of display (68°F or 20°C)
Cross sensitivities at 50% LEL:	2.00Vol.% H2: approx.140%;0.70Vol.% C4H10: approx.72%; 2.20Vol.% CH4: 100%;0.70Vol.% C5H12: approx.71%; 0.85Vol.% C3H8: approx.85%;0.50Vol.% C6H14: approx.55%; The above information refers to the detection range for methane. It may vary from sensor to sensor and depends on the gas concentration and on the age of the sensor.
Expected lifetime:	3 years

MK222-2/-3 Photo-ionisation sensor for toxic combustible vapors Isobutylene  $i-C_4H_8$  (GfG part number 1460703/1460704)

Response time:	$t_{90}$ : <30 seconds
Ionisation potential:	10.6 eV
Cross sensitivities:	Kerosene: approx.250%; C8H8: 250%; C7H8: 190%; C6H6: 190%; Diesel: approx.110; Benzine: approx.90%; C3H6O: 83%; C8H18: 45%; C7H16: 40%; H2S: 30%; C6H14: 22%; NO: 14%; NH3: 11%; C5H12: 10%; C4H10=C3H8=CH4=H2=0%
Expected lifetime:	3 years

MK224-5/MK231-5 Infrared sensor for carbon dioxide CO<sub>2</sub> (GfG part numbers 1460780, 1460782)

Detection range:	0.02 .. 5.0%Vol (25.0%Vol[#]) Zero point drift $\leq 0.03\%$ Vol
Response time	$t_{50}$ : $\leq 20$ sec $t_{90} \leq 50$ sec $t_{10} \leq 50$ sec (decay time @ CO <sub>2</sub> )
Pressure	70 to 130 kPa: <1.6% of display per 1% pressure change (referred to 100 kPa)
Humidity	0% to 95% r.h.: Maximum $\pm 0.01$ Vol% or $\pm 2\%$ of display (referred to 50% r.h. @ 20°C)
Temperature	-20 to +55°C: Maximum $\pm 0.01$ Vol% or $\pm 10\%$ of display (referred to 20°C)
Long term stability	per month: Maximum $\pm 0.01$ Vol% or $\pm 2\%$ of display (laboratory conditions)
Expected lifetime:	6 years

MK348-5 Electrochemical sensor for nitrogen dioxide NO<sub>2</sub> (GfG part number 1460238)

Response time	$t_{90}$ : <30 seconds
Pressure	800 to 1,200 hPa: Maximum $\pm 0.3$ ppm or $\pm 5\%$ of display (referred to 1,000 hPa)
Humidity	15% to 90% r.h.: Maximum $\pm 0.3$ ppm or $\pm 5\%$ of display (referred to 50% r.h.)
Temperature	-4 to 122°F (-20 to +50°C): Maximum $\pm 0.3$ ppm or $\pm$ of display (referred to 68°F or 20°C)
Cross sensitivity:	Cl <sub>2</sub> $\approx 100\%$ ; H <sub>2</sub> S $\approx -8\%$ ; CO=SO <sub>2</sub> =NO=0%   (*1)
Expected lifetime:	3 years

MK369-5/-6 Electrochemical sensor for carbon monoxide CO (GfG part number 1460232)			
Response time		$t_{50}$ : <10 seconds	$t_{90}$ : <30 seconds
Pressure	800 to 1,200 hPa:	Maximum $\pm 3$ ppm or $\pm 10\%$ of display	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.:	Maximum $\pm 3$ ppm or $\pm 10\%$ of display	(referred to 50% r.h.)
Temperature	14 to 104°F (-10 to +40°C):	Maximum $\pm 3$ ppm or $\pm 10\%$ of display	(referred to 68°F or 20°C)
Temperature	-4 to 122°F (-20 to +50°C):	Maximum $\pm 3$ ppm or $\pm 15\%$ of display	(referred to 68°F or 20°C)
Cross sensitivity:		$H_2S < \pm 3\%$ ; $C_2H_4 < 60\%$ ; $NO < 35\%$ ; $NO_2 < 10\%$ ; $H_2 < 10\%$ ; $SO_2 = 0\%$ (*1)	
Expected lifetime:		3 years	

MK432-5 Electrochemical sensor for oxygen O2 (GfG part number 1460231D)			
Response time:		$t_{50}$ : <10 seconds	$t_{90}$ : <20 seconds
Pressure	800 to 1,200 hPa:	Maximum $\pm 0.2$ Vol.% or $\pm 2.5\%$ of range	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.:	Maximum $\pm 0.2$ Vol.% or $\pm 2.5\%$ of range	(referred to 50% r.h.)
Temperature	-4 to 122°F (-20 to +50°C):	Maximum $\pm 0.5$ Vol.% or $\pm 2.5\%$ of display	(referred to 68°F or 20°C)
Expected lifetime:		5 years	

MK380-5 Electrochemical sensor for carbon monoxide CO and hydrogen sulfide H <sub>2</sub> S (COSH) (GfG part number 1650730)			
Response time:		$t_{50}$ : <15 seconds	$t_{90}$ : <45 seconds
Pressure	800 to 1,200 hPa:	Maximum $\pm 3$ ppm or $\pm 7\%$ CO reading or $\pm 10\%$ CO reading	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.:	Maximum $\pm 3$ ppm or $\pm 7\%$ CO reading or $\pm 10\%$ CO reading	(referred to 50% r.h.)
Temperature	-4 to 122°F (-20 to +50°C):	Maximum $\pm 3$ ppm or $\pm 15\%$ display	(referred to 68°F or 20°C)
Cross sensitivities CO-portion:		$H_2S \approx 0.40\%$ ; $H_2 \approx 20\%$ ; $SO_2 < 20\%$ ; $NO_2 < 2\%$ ; $NO < 0.3\%$ ; $Cl_2 = 0\%$ (*1)	
Cross sensitivities H <sub>2</sub> S-portion:		$CO < 2\%$ ; $NO_2 \approx -20\%$ ; $SO_2 \approx 8.20\%$ ; $NO < 3\%$ ; $H_2 \approx 0.03\%$ ; $Cl_2 = 0\%$ (*1)	
Expected lifetime:		3 years	

MK396-5 Electrochemical sensor for hydrogen H <sub>2</sub> (*2) (GfG part number 1460258)			
Response time:		$t_{50}$ : <30 seconds	$t_{90}$ : <90 seconds
Pressure	800 to 1,200 hPa:	Maximum $\pm 10$ ppm or $\pm 10\%$ of display	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.:	Maximum $\pm 10$ ppm or $\pm 10\%$ of display	(referred to 50% r.h.)
Temperature	-4 to 122°F (-20 to +50°C):	Maximum $\pm 20$ ppm or $\pm 20\%$ of display	(referred to 68°F or 20°C)
Cross sensitivities:		$C_2H_4 \approx 80\%$ ; $NO \approx 35\%$ ; $HCN \approx 30\%$ ; $CO < 20\%$ ; $H_2S < 20\%$ ; $NO_2 = SO_2 = Cl_2 = HCl = 0\%$ (*1)	
Expected lifetime:		2 years	

MK396-5 Electrochemical sensor for hydrogen H <sub>2</sub> (*2) (GfG part number 1460260)		
Response time:	t <sub>50</sub> : <45 seconds	t <sub>90</sub> : <90 seconds
Pressure	800 to 1,200 hPa: Maximum ±0.01Vol% or ±10% of display	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.: Maximum ±0.01Vol% or ±10% of display	(referred to 50% r.h.)
Temperature	-4 to 122°F (-20 to +50°C): Maximum ±0.02Vol% or ±20% of display	(referred to 68°F or 20°C)
Cross sensitivities:	NO <sub>2</sub> ≈ -400%; CO ≈ 150%; H <sub>2</sub> S ≈ 20%; C <sub>2</sub> H <sub>4</sub> :n/d; NH <sub>3</sub> =CO <sub>2</sub> =Cl <sub>2</sub> =SO <sub>2</sub> =HCN=0 (*1)	
Expected lifetime:	2 years	

MK396-5 Electrochemical sensor for hydrogen H <sub>2</sub> (*2) (GfG part number 1460259)		
Response time:	t <sub>50</sub> : <45 seconds	t <sub>90</sub> : <90 seconds
Pressure	800 to 1,200 hPa: Maximum ±0.01Vol% or ±10% of display	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.: Maximum ±0.01Vol% or ±10% of display	(referred to 50% r.h.)
Temperature	-4 to 122°F (-20 to +50°C): Maximum ±0.02Vol% or ±25% of display	(referred to 68°F or 20°C)
Cross sensitivities:	H <sub>2</sub> S ≈ 220%; C <sub>2</sub> H <sub>4</sub> :n/d; NH <sub>3</sub> =CO <sub>2</sub> =CO=Cl <sub>2</sub> =HCN=NO=NO <sub>2</sub> =0 (*1)	
Expected lifetime:	2 years	

MK429-5/-6 Electrochemical sensor for hydrogen sulfide H <sub>2</sub> S (GfG part number 1460236)		
Response time:	t <sub>50</sub> : <15 seconds	t <sub>90</sub> : <45 seconds
Pressure	800 to 1,200 hPa: Maximum ±2ppm or ±10% of display	(referred to 1,000 hPa)
Humidity	15% to 90% r.h.: Maximum ±2ppm or ±10% of display	(referred to 50% r.h.)
Temperature	14 to 104°F (-10 to +40°C): Maximum ±2ppm or ±10% of display	(referred to 68°F or 20°C)
Temperature	-4 to 122°F (-20 to +50°C): Maximum ±2ppm or ±15% of display	(referred to 68°F or 20°C)
Cross sensitivities:	SO <sub>2</sub> ≈ 20%; NO <sub>2</sub> < -20%; CO < 1%; NO < 0,2%; H <sub>2</sub> < 0,1%; (*1)	
Expected lifetime:	3 years	

MK227-5/MK231-5 Infrared sensor for combustible gases and vapors (GfG part numbers 1460770, 1460772, 1460773, 1460774, 1460778)

Detection range:	0 .. 100%LEL (100%Vol CH4 [#])		
Response time:	t50: ≤ 20 sec t90 ≤ 45 sec (@ CH4 Methane) t50: ≤ 25 sec t90 ≤ 66 sec (@ CH4 Propane) t50: ≤ 30 sec t90 ≤ 99 sec (@ CH4 n-Hexane) t50: ≤ 35 sec t90 ≤ 371 sec (@ CH4 n-Nonane)		
Pressure	70 to 130 kPa:	<1.5% of CH4 display per 1% pressure change <1.2% of C3H8 display per 1% pressure change	(referred to 100 kPa) (referred to 100 kPa)
Humidity	0% to 95% r.h.:	Maximum ±2%LEL or ±15% of display	(referred to 0% r.h. @ 40°C)
Temperature	-20 to +50°C:	Maximum ±2%LEL or ±10% of C3H8 display	(referred to 20°C)

Cross sensitivities [#]:	@ 50% LEL:	Gas supply	CH4 display	C3H8 display	n-Hexane display	n-Nonane display
		0,85%Vol C3H8	ca.145%LEL	= 50% LEL	ca.67% LEL	ca.80% LEL
0,70%Vol C5H12	ca.130%LEL	ca.46% LEL	ca.62% LEL	ca.75% LEL		
0,70%Vol C4H10	ca.110% LEL	ca.42% LEL	ca.57% LEL	ca.69% LEL		
1,00%Vol C3H8O	ca.97% LEL	ca.39% LEL	ca.53% LEL	ca.64% LEL		
0,50%Vol C6H14	ca.88% LEL	ca.37% LEL	= 50% LEL	ca.60% LEL		
0,55%Vol C7H16	ca.87% LEL	ca.36% LEL	ca.49% LEL	ca.59% LEL		
1,10%Vol C4H8O2	ca.76% LEL	ca.34% LEL	ca.45% LEL	ca.55% LEL		
0,35%Vol C9H20	ca.65% LEL	ca.31% LEL	ca.41% LEL	= 50% LEL		
2,20%Vol CH4	= 50% LEL	ca.26% LEL	ca.35% LEL	ca.42% LEL		
0,90%Vol C4H8O	ca.49% LEL	ca.26% LEL	ca.34% LEL	ca.41% LEL		
0,55%Vol C7H8	ca.29% LEL	ca.18% LEL	ca.24% LEL	ca.29% LEL		
1,25%Vol C3H6O	ca.26% LEL	ca.16% LEL	ca.22% LEL	ca.27% LEL		
May vary from sensor to sensor and depend on the gas concentration and on the age of the sensor.						

(\*1) Displayed value with reference to the supplied gas concentration

(\*2) Not approved for LEL monitoring for applications of primary explosion protection

## Technical Data

<b>Type:</b>	G460	
<b>Detection principle:</b>	Electrochemical (EC): toxic gases and oxygen Catalytic combustion (CC): combustible gases and vapors (up to 100% LEL) Infrared (IR): Carbon dioxide, combustibles	
<b>Detection range:</b>	See Sensor Type and Detection Range	
<b>Response time <math>t_{90}</math>:</b>	See Sensor Specifications	
<b>Expected sensor life:</b>	3 years	
<b>Gas supply:</b>	Diffusion	
<b>Display:</b>	Illuminated full-graphic LCD, automatic size adjustment for optimal read out, battery capacity display, gas concentration as instantaneous and peak value	
<b>Alarm:</b>	Depending on gas type; 2 or 3 instantaneous and 2 dosimeter alarms, low battery alarm Visual and audible warning and display indication, coloring of display depending on alarm status (orange/red) Buzzer: 103 dB (can be restricted to 90 dB)	
<b>Climate conditions:</b>		
<b>for operation:</b>	-4 to 131°F (-20 to +55°C) / 5 to 95% r. h. / 70 to 130 kPa	
<b>for storage:</b>	-13 to 122°F (-25 to +50°C) / 5 to 95% r. h. / 70 to 130 kPa (recommended 32 to 86°F (0 to +30°C))	
<b>Zero point and sensitivity calibration:</b>	Manual or automatic with calibration program	
<b>Operational time:</b>	Up to 24 hours with LEL & toxic sensors; up to 18 hours with IR, CO2 or PID sensors.	
<b>Power supply:</b>	1. NiMH battery module, rechargeable A (maximum charging current) (maximum voltage) or 2. Alkaline battery module, non-rechargeable with 2x size AA Duracell MN1500 LR6	Im=1 Um=30 VDC
<b>Casing:</b>		
Material:	Rubberized plastic	
Dimensions:	2.95x4.33x2.17 inches (75x110x55 mm) (HxWxD)	
Weight:	10.23 oz. (280 g)	
Protection:	IP 67	
<b>Approvals:</b>		
Approvals:	cCSAus	
Approved:	Class I, Division 1, Groups A, B, C and D T3 Ex ia IIC T3 Class I, Zone 0 AEx ia IIC T3 Ex db eb ia IIC T3/T4 Gb (NiMH = T3) $-20 \leq T_a \leq +45 / +50 \text{ } ^\circ\text{C}$ 08.1934905X	
Standards:	IEC 60079-0:2011 (Ed.6) IEC 60079-7:2015 (Ed.5) IEC 60079-1:2014 (Ed.7) IEC 60079-11:2011 (Ed.6) CSA C22.2 No. 152-M1984 UL 913 ANSI / ISA-12.13.01-2000	
EMI/RFI resistance:	EMC directive 89/336/EEC	

## Prudence

- Never substitute any components as this may compromise the G460s intrinsic safety.
- Ne jamais remplacer les composants, car cela pourrait compromettre la sécurité intrinsèque du G460.
- For safety reasons, this equipment must be operated and serviced by qualified personnel only. Read and understand the user manual completely before operating or servicing this device.
- Pour des raisons de sécurité, cet équipement doit être utilisé et entretenu par du personnel qualifié. Lire et comprendre le manuel d'utilisation avant de faire fonctionner ou de réparer cet appareil.
- Do not use the detector if it is damaged. Before you use the detector, inspect the case. Look for cracks or missing parts.
- Ne pas utiliser le détecteur s'il est endommagé. Avant d'utiliser le détecteur, inspectez le cas de fissures ou de pièces manquantes.
- If the detector is damaged or something is missing, contact GfG Instrumentation, Inc. immediately.
- Si le détecteur est endommagé ou qu'il manque quelque chose, contactez GfG Instrumentation Inc. immédiatement.
- Calibrate the detector before first-time use and then on a regular schedule, depending on use and sensor exposure to poisons and contaminants.
- étalonner le détecteur avant la première utilisation, puis à intervalles réguliers, en fonction de l'utilisation et de l'exposition du capteur aux poisons et des contaminants.
- GfG recommends that you “bump test” the sensors before each use to confirm their ability to respond to gas. To do this, expose the detector to a gas concentration that exceeds the alarm set points. Manually verify that the audible and visual alarms are activated. Calibrate if the readings are not within the specified limits.
- GfG vous recommande de “test cogner” les capteurs avant chaque utilisation afin de confirmer leur capacité à répondre à gaz. Pour ce faire, exposer le détecteur à une concentration de gaz qui dépasse les points de consigne d'alarme. Vérifier manuellement que les alarmes sonores et visuelles sont activées. Calibrer si les lectures ne sont pas dans les limites spécifiées.

- It is recommended that the combustible sensor be checked with a known concentration of calibration gas after any known exposure to catalyst contaminants/poisons (sulfur compounds, silicon vapors, halogenated compounds, etc).
- Il est recommandé que le capteur de gaz inflammables être vérifié avec une concentration connue de gaz d'étalonnage après une exposition connue à catalyseur contaminants / poisons (composés soufrés, des vapeurs de silicium, composés halogénés, etc)
- The combustible sensor is factory calibrated to 50% LEL methane. If monitoring a different combustible gas in the % LEL range, calibrate the sensor using the appropriate gas.
- Le capteur de gaz combustible est calibré en usine à 50% LEL méthane. Si le suivi d'un autre gaz combustible dans la gamme de% LEL, étalonner le capteur en utilisant le gaz approprié.
- High off-scale readings may indicate an explosive concentration.
- Haute lectures hors échelle peut indiquer une concentration explosive.
- Only the combustible gas detection portion of this instrument has been assessed for performance by CSA International.
- Seule la partie de détection de gaz combustible de cet instrument a été évaluée pour la performance par CSA International.
- Protect the combustible sensor from exposure to lead compounds, silicones and chlorinated hydrocarbons. Although certain organic vapors (such as leaded gasoline and halogenated hydrocarbons) may temporarily inhibit sensor performance, in most cases the sensor will recover after calibration.
- Protégez le capteur de gaz combustible à partir de l'exposition au plomb, composés silicones et des hydrocarbures chlorés. Bien que certaines vapeurs organiques (comme l'essence au plomb et les hydrocarbures halogénés) peuvent inhiber temporairement les performances du capteur, dans la plupart des cas, le capteur va récupérer après calibration.
- For use only in hazardous locations where oxygen concentrations do not exceed 20.9% volume (v/v).
- A utiliser uniquement dans des endroits dangereux où les concentrations d'oxygène ne dépasse pas 20,9% en volume (v / v).

- Any rapidly increasing reading followed by a declining or erratic reading may indicate a gas concentration beyond the upper scale limit, which may be hazardous.
- Toute lecture augmente rapidement suivie par une lecture diminution ou irrégulière peut indiquer une concentration de gaz au-delà de la limite supérieure de l'échelle, ce qui peut être dangereux.
- Extended exposure of the G460 to certain concentrations of combustible gases and air may stress detector elements, which can seriously affect the device's performance. If an alarm occurs due to a high concentration of combustible gases, recalibration should be performed, or if needed, the sensor replaced.
- Une exposition prolongée de la G460 à certaines concentrations de gaz combustibles et d'air peut souligner éléments détecteurs, qui peuvent sérieusement affecter les performances de l'appareil. Si une alarme se produit en raison d'une forte concentration en gaz combustibles, l'étalonnage doit être effectué, ou en cas de besoin, le capteur remplacé.
- Do not test the combustible sensor's response with a butane cigarette lighter; doing so can damage the sensor.
- Ne pas tester la réponse des capteurs combustible avec un briquet au butane, cela peut endommager le capteur.
- Do not expose the detector to electrical shock and/or severe continuous mechanical shock.
- Ne pas exposer le détecteur de choc électrique et / ou sévère choc mécanique continue.
- Do not attempt to disassemble, adjust or service the detector unless instructions for that procedure are contained in the manual and/or that part is listed as a replacement part.
- N'essayez pas de démonter, modifier ou réparer le détecteur à moins que des instructions pour que la procédure se trouvent dans le manuel et / ou la partie est répertorié comme une pièce de rechange.
- Electromagnetic interference (EMI) signals may cause incorrect operation of this detector.
- interférence des signaux électromagnétiques (EMI) peut entraîner un mauvais fonctionnement de ce détecteur.

- The G460 with IR-EX 005 Sensor complies with the performance requirements of CSA C22.2 No. 152 over the temperature range of 0 to 55°C. Outside this range, it exceeds the standard's minimum tolerance requirements of  $\pm 3\%$  of full scale. At -10°C it is -4% and at -20°C it is -5%.
- Le G460 avec IR-EX capteur 005 est conforme avec les exigences de performance de la norme CSA C22.2 No. 152 au cours de la plage de temperature de 0 a 55°C. En dehors de cette gamme, il depasse les exdignences de tolerance aux minimales les normes de 3% la pleine echelle. A-10°C, il est de -4% et a -20°C, il est de -5%.

## **Warranty**

GfG Instrumentation warrants our products to be free from defects in material and workmanship when used for their intended purpose, and agrees to remedy any such defect or to furnish a new part (at the option of GfG Instrumentation) in exchange for any part of any product that we manufacture that under normal use is found to be defective; provided that the product is returned, by the purchaser, to GfG's factory, intact, for our examination, with all transportation costs prepaid, and provided that such examination reveals, in our judgment, that it is defective.

This warranty does not extend to any products that have been subjected to misuse, neglect, accident, or unauthorized modifications; nor does it extend to products used contrary to the instructions furnished by us or to products that have been repaired or altered outside of our factory. No agent or reseller of GfG Instrumentation may alter the above statements.



**GfG Instrumentation, Inc.**

1194 Oak Valley Dr.

Suite 20

Ann Arbor, MI 48108

USA

US/Canada: (800) 959-0329

US/Canada Fax: (734) 769-1888

International: +1 734 769 0573

International Fax: +1 734 769 1888

Website: [www.goodforgas.com](http://www.goodforgas.com)



**GfG Instrumentation**

Worldwide Manufacturer of Gas Detection Solutions

2017 7004-460 Rev. 16 (06/04/19)